



Original		Replacement		Original		Replacement	
	Power		Power		Menu		Menu
	Mute		Mute		TV / AV		AV
	1		1		Sleep		Sleep
	2		2		Up / PR+		Up
	3		3		Up / PR+		Ch +
	4		4		Down / PR-		Down
	5		5		Down / PR-		Ch -
	6		6		Right / Vol+		Right
	7		7		Right / Vol+		Vol +
	8		8		Left / Vol-		Left
	9		9		Left / Vol-		Vol -
	0		0		OK		Ok
	*		Guide		Text / Mix		Text
	*		Pre Ch		Q.View		Options
	PSM		Format		List		List
	SSM		Shift + Dual		Red		Red
	I/II		Dual		Green		Green





Original		Replacement		Original		Replacement	
	Yellow		Yellow				
	Blue		Blue				
	Update		Subt				
	Time		Eject				
	Reveal		TV/R				
	Hold		Stop				
	PIP/*		3D				
	ARC		Smart				
	TV / PC		Back				
	Position/*		Media				
	Swap/*		Shift + Media				
	Input/*		Shift + AV				
	Mode/*		Shift + 3D				
	PR+/*		Shift + Ch +				
	PR-/*		Shift + Ch -				

