











 
 
 
 

 







 









 

 
 
 

 

 
 
 
 
 
 

 
 
 

 
 


 
 



 








Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	Open / Close		Eject
	Mute		Mute
	PScan		Options
	Next		AV
	DVD		Smart
	Tuner		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mode		D. Menu
	Tone		Dual
	Title / Rotate		List
	Menu		Menu
	Info		Info
	Exit		Exit
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +





Original	Replacement
 Vol-	 Vol -
 Stop / FM Mode	 Stop
 Play	 Play
 Pause	 Pause
 Zoom / Clear	 Shift + Exit
 Zoom / Clear	 Shift + Eject

Original	Replacement

