































 































 







Original		Replacement		Original		Replacement	
	Power		Power		9		9
	Top Menu		Shift + D.Menu / Top Menu		AD		Audio / Lang I/II
	DVD Menu		D.Menu / Top		0		0
	Tv/DVD		TV/Radio /		ATV/DTV		Shift + AV / Input / RDS
	Open/Close		Eject / Surround		Guide		Guide / EPG / -/-
	▼		Shift + Down		Input		AV / Input / RDS
	O/I/II		Display / Media		Menu		Menu / Home
	Subtitle		Subtitle / EQ		Quick		Shift + Exit / Cancel / Clear
	Text/Angle		Text / Goto		Up		Up
	1		1		Left		Left
	2		2		OK		OK
	3		3		Right		Right
	4		4		Down		Down
	5		5		Exit		Exit / Cancel / Clear
	6		6		Jump		Smart / List
	7		7		Return		Back / Return
	8		8		Setup		Setup / OPT /





	Original	Replacement		Original	Replacement
	P+	CH+ / Page+			
	[≡i]/[≡+]	INFO / Angle			
	Vol+	Vol+			
	P-	CH- / Page-			
	Mute	Mute / Dimmer			
	Vol-	Vol-			
	Pause	Pause / Step / Freeze			
	I<</[≡?]	I<< / Preset-			
	>>I[O]/[≡x]	>>I / Preset+			
	<</[≡+]	<< / Tune-			
	Play	Play / Slow			
	Stop	Stop / Hold			
	>>/[≡◇]	>> / Tune+			
	Red/Zoom	Red / Netflix / Search			
	Green/Repeat	Green / APP / Repeat			
	Yellow/Root	Yellow / YouTube / Repeat			
	Blue/Title	Blue / Prime Video / Random			

	Original	Replacement

