







 




Original	Replacement
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 i	 Info
 Mute	 Mute
 Tv/Radio	 TV/R
 Input	 AV
 Digital Menu	 Shift + Menu
 Menu/Setup	 Menu
 Exit/Cancel	 Exit

Original	Replacement
 DVD Menu	 D. Menu
 Top Menu	 List
 Guide	 Guide
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Eject	 Eject
 Tv/DVD	 Smart
 ATV/DTV	 Media
 Enter/CH.List	 Ok
 Left	 Left
 Right	 Right
 Up	 Up
 Down	 Down
 Play	 Play
 Stop	 Stop





Original	Replacement
 Return	 Back
 <</Rev/[≡?]	 <<
 <</[≡+]	 <<
 >> /[≡◇]	 >>
 >>/FF/[≡o]	 >>
 Pause	 Pause
 Green	 Green
 Yellow/play Mode	 Yellow
 Blue/ > Slow	 Blue
 Red/< Slow	 Red
 [≡]	 Text
 Sleep	 Sleep
 Subtitle	 Subt
 Repeat A-B	 +  Shift + Play
 Audio Select	 Dual
 Zoom/CH RTN	 3D
 Pic Size	 Format

Original	Replacement
 Angle	 Rec
 Marker	 Options
 Jump	 Pre Ch
 Power	 Power

