

 





 





 



 





 



 





 





 



 
















 









 


 





Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	S		Setup / OPT /
	0		0
	Source		AV / Input / RDS
	Menu/Menu		Menu / Home
	Guide		Guide / EPG / -/--
	Tv/Fav/Radio		TV/Radio /
	Exit/Back		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	PR+		CH+ / Page+
	Vol-		Vol-
	Vol+		Vol+
	PR-		CH- / Page-
	[[+]		Smart / List
	>[]<		Display / Media
	[i+]		Info / Angle
	Text		Text / Goto
	>/[▼]		Shift + >> /
	Play/O/I/II		Play / Slow
	<</[≡]		<< / Tune-





Original	Replacement
 >>/Subtitle	 >> / Tune+
 Open/close/[≡?]	 Eject / Surround
 Stop/[≡+]	 Stop / Hold
 I<</[≡$]	 I<< / Preset-
 >>I/[≡x]/[O]	 >>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

















 





 



 



 













 

 

 

 



 

 

 





Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	_ Menu/DVD		Menu / Home
	- Exit/Back		Exit / Cancel / Clear
	- Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Vol-		Vol-
	Vol+		Vol+
	Pause / Step / Freeze		Pause / Step / Freeze
	Shift + Play /		Shift + Play /
	Play / Slow		Play / Slow
	<< / Tune-		<< / Tune-
	Shift + << /		Shift + << /
	Shift + >> /		Shift + >> /
	>> / Tune+		>> / Tune+
	Eject / Surround		Eject / Surround
	Stop / Hold		Stop / Hold
	I<<< / Preset-		I<<< / Preset-
	Shift + I<<< / Preset-		Shift + I<<< / Preset-
	Shift + >>> / Preset+		Shift + >>> / Preset+
	>>> / Preset+		>>> / Preset+





Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		Pause / Step / Freeze		Pause / Step / Freeze
	Power		Power		Shift + Play /		Shift + Play /
	1		1		Play / Slow		Play / Slow
	2		2		<< / Tune-		<< / Tune-
	3		3		Shift + << /		Shift + << /
	4		4		Shift + >> /		Shift + >> /
	5		5		>> / Tune+		>> / Tune+
	6		6		Eject / Surround		Eject / Surround
	- 7		7		Stop / Hold		Stop / Hold
	- 8		8		Shift + I<< / Preset-		Shift + I<< / Preset-
	- 9		9		I<< / Preset-		I<< / Preset-
	0		0		Shift + >>I / Preset+		Shift + >>I / Preset+
	Source		AV / Input / RDS		>>I / Preset+		>>I / Preset+
	P+		CH+ / Page+				
	Vol-		Vol-				
	Vol+		Vol+				
	P-		CH- / Page-				

