 



 

 

 

 

 
 
 

 

 





 

 

 

 



 

 

 

 

 

 

 

 



 



 


 




 









 
 
 
 


 
 

 

 

 











 
 
 



Original	Replacement
 Source	 AV / Input / RDS
 Power	 Power
 TV	 TV/Radio /
 → / ←	 Shift + Smart / List
 [++]	 Display / Media
 [▼]	 Shift + CH- /
 Subtitle	 Subtitle / EQ
 O /	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 AD	 Shift + AV / Input / RDS
 0	 0
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 [i+]	 Info / Angle
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 Quick	 Shift + Exit / Cancel / Clear
 Search	 Shift + Red / Netflix /
 Home	 Menu / Home
 [o]	 Shift + Display / Media
 Options	 Setup / OPT /
 ▲	 Shift + Up
 GUIDE	 Guide / EPG / -/-





Original	Replacement
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 ▼	 Shift + Down
 EXit	 Exit / Cancel / Clear
 <<<	 Shift + <<< /
 <<<	 <<< / Tune-
 Play	 Play / Slow
 >>>	 >>> / Tune+
 >>>	 Shift + >>> /
 I<<<	 I<<< / Preset-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 >>>I	 >>>I / Preset+

Original	Replacement
 List	 Smart / List
 Text	 Text / Goto
 Rec	 Rec / Rec Mode
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

