



 
 

 

 


 














 
 






Original	Replacement
Power	Power
VCR	Shift + 2
DVD	Shift + 1
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Input Select	AV
Display / CLK/CNT	Info
Open/Close / Eject	Eject
TV / VCR	TV/R

Original	Replacement
Clear / Count. Reset	Exit
Blank Search	Green
Top Menu	Shift + Menu
Menu	Menu
Return	Back
Zoom	Shift + Eject
Angle	Format
Subtitle	Subt
Audio	Dual
Instant Replay	Shift + Play
Play	Play
<< REW	<<
FWD >>	>>
Slow	Shift + Pause
Stop	Stop
Pause Step / Still	Pause
I<< Skip	I<<





Original		Replacement		Original		Replacement	
	Skip >>		>>				
	Repeat		Text				
	Marker		Pre Ch				
	i / Set Up / VCR Menu		Options				
	Up / PR/TRK +		Up				
	Up / PR/TRK +		Ch +				
	Down / PR/TRK -		Down				
	Down / PR/TRK -		Ch -				
	Right		Right				
	Left		Left				
	OK / Enter		Ok				
	Auto TRK		Smart				
	A-B RPT / SP/LP		Vol +				
	Random / Inst		Vol -				
	Search	 + 	Shift + TV/R				
	Program		Sleep				
	Rec / OTR.		Rec				

