



Original	Replacement
Power	Power
VCR	+ Shift + 2
DVD	+ Shift + 1
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Input Select	AV
Display / CLK/CNT	Info
Open/Close / Eject	Eject
TV / VCR	TV/R

Original	Replacement
Clear / Count. Reset	Exit
Blank Search	Green
Top Menu	+ Shift + Menu
Menu	Menu
Return	Back
Zoom	+ Shift + Eject
Angle	Format
Subtitle	Subt
Audio	Dual
Instant Replay	+ Shift + Play
Play	Play
<< REW	<<
FWD >>	>>
Slow	+ Shift + Pause
Stop	Stop
Pause Step / Still	Pause
I<< Skip	I<<





Original	Replacement	Original	Replacement
Skip >>I	>>I		
Repeat	Text		
Marker	Pre Ch		
i / Set Up / VCR Menu	Options		
Up / PR/TRK +	Up		
Up / PR/TRK +	Ch +		
Down / PR/TRK -	Down		
Down / PR/TRK -	Ch -		
Right	Right		
Left	Left		
OK / Enter	Ok		
Auto TRK	Smart		
A-B RPT / SP/LP	Vol +		
Random / Inst	Vol -		
Search	Shift + TV/R		
Program	Sleep		
Rec / OTR.	Rec		

