










 



 

 

 

 

 

 



 

 



 

 

 

 



 



 



 

 




 

 



 




| Original | Replacement | Original | Replacement |
|--|---|---|--|
|  Power |  Power |  Prog- |  Ch - |
|  Open / Close |  Eject |  Time Slip |  Sleep |
|  Input Select |  AV |  Info |  Info |
|  HDMI |  Media |  Text |  Text |
|  1 |  1 |  Audio |  Dual |
|  2 |  2 |  Subtitle |  Subt |
|  3 |  3 |  Guide |  Guide |
|  4 |  4 |  Top Menu |  Menu |
|  5 |  5 |  Disc Menu |  D. Menu |
|  6 |  6 |  Up |  Up |
|  7 |  7 |  Left |  Left |
|  8 |  8 |  Enter |  Ok |
|  9 |  9 |  Right |  Right |
|  0 |  0 |  Down |  Down |
|  SAT Link |  Smart |  Display |  Shift + Info |
|  Clear |  Exit |  Return |  Back |
|  Prog+ |  Ch + |  Red |  Red |



