

 

 

 


 

 

 
 
 


 
 

 

 

 

 

 
 










 

 
 

 



 
 

 





Original	Replacement
 Power	 Power
 Eject	 Eject
 Tv/Disc	 TV/R
 ATV/DTV	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 AD	 Shift + Subt
 Input	 AV
 Mute	 Mute

Original	Replacement
 Quick	 Pre Ch
 P+	 Ch +
 P-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Pop Up Menu	 D. Menu
 Top Menu	 Shift + Menu
 Guide/Disc	 Guide
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu/Set Up	 Menu
 Return	 Back
 Pause	 Pause





Original	Replacement	Original	Replacement
 Play	 Play	 O)/ /	 Dual
 Stop	 Stop	 [≡i]/[i+]	 Info
 I<< Skip	 I<<	 Angle	 Rec
 << Rev	 <<		
 >> FF	 >>		
 Skip >>I (Slow)	 >>I		
 Red/Program	 Red		
 Green/Digest	 Green		
 Yellow/Zoom	 Yellow		
 Blue/Book Mark	 Blue		
 [≡?]	 Media		
 [≡+]	 Format		
 [≡♦]	 3D		
 [≡o]/[≡x]	 Sleep		
 [▼]	 Options		
 Text	 Text		
 Subtitle	 Subt		