

 



 



 



 

 

 

 

 

























 





 



 













 

 














Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Lang		Sound / Title		OK		OK
	Lang		Shift + Audio / Lang I/II		Right		Right
	Search		Red / Netflix / Search		Vol+		Vol+
	Memory		D.Menu / Top		Down		Down
	Favorite PR		Fav / Marker / PC		CH-		CH- / Page-
	Game		Picture / Format		Mute		Mute / Dimmer
	Teletext		Text / Goto		Audio		Audio / Lang I/II
	Guide		Shift + Guide / EPG / -/--		1		1
	PR List		Smart / List		2		2
	EPG		Guide / EPG / -/--		3		3
	Info		Info / Angle		Pause		Pause / Step / Freeze
	Menu		Menu / Home		4		4
	Exit		Exit / Cancel / Clear		5		5
	Up		Up		6		6
	CH+		CH+ / Page+		Tv/Radio		TV/Radio /
	Left		Left		7		7





Original	Replacement	Original	Replacement
	8		8
	9		9
	Sleep		Sleep / Timer
	0		0
	P/N		Setup / OPT /
	Recall		Back / Return
	TV/AV		AV / Input / RDS
	-		<< / Preset-
	+		>>  / Preset+
	-/--		Shift + 0
	Mode		Display / Media

Original	Replacement	Original	Replacement

