

 



 
 
 

 
 


 
 


 
 


 
 
 
 
 
 


 

 

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 

 

 

 


 

 
 



 
 





Original		Replacement		Original		Replacement	
	Power		Power		+/16:9		3D
	Input		AV		PP		Back
	Mute		Mute		INST		Options
	(I)		Smart		[≡i]/I-II		Dual
	1		1		O		Subt
	2		2		?		Guide
	3		3		X/(<>)		TV/R
	4		4		Red/Picture		Red
	5		5		Green/Sound		Green
	6		6		Yellow/Timer		Yellow
	7		7		Blue/Audio		Blue
	8		8		Menu		Menu
	9		9		Up		Up
	0		0		Down		Down
	[≡]		Text		Right		Right
	P<P		Pre Ch		Left		Left
	◆/[ +]		Format		P+		Ch +





Original		Replacement		Original		Replacement	
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				

