









 
 








 

 
 
 


 
 





 



 
 


Original	Replacement
 Power	 Power
 Display	 Display / Media
 Setup	 Setup / OPT /
 Mute	 Mute / Dimmer
 Menu	 Menu / Home
 Music	 Sound / Title
 Copy	 Fav / Marker / PC
 Zoom	 Zoom / Size
 TV System	 TV/Radio /
 Browser	 Info / Angle
 Vol-	 Vol-
 Vol+	 Vol+
 Guide	 Guide / EPG / -/-
 Return	 Back / Return
 Up	 Up
 Left	 Left
 Enter	 OK

Original	Replacement
 Right	 Right
 Down	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Time Shift	 Picture / Format
 0	 0
 Goto	 Text / Goto
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold





Original		Replacement	
	Timer		Sleep / Timer
	Pause/Step		Pause / Step / Freeze
	I>/Slow		Eject / Surround
	I<<		I<< / Preset-
	Rec List		Smart / List
	←/INS Replay		CH- / Page-
	→/CM Skip		CH+ / Page+
	>>I		>>I / Preset+
	A-B		Yellow / YouTube / Repeat
	Subtitle		Subtitle / EQ
	Repeat		Green / APP / Repeat
	<<		<< / Tune-
	F1		D.Menu / Top
	Source		AV / Input / RDS
	Audio		Audio / Lang I/II
	>>		>> / Tune+

Original		Replacement	

