







 

 
 
 

 

 

 

 



 











Original	Replacement
 Power	 Power
 [::]	 D.Menu / Top
 Netflix	 Red / Netflix / Search
 prime video	 Blue / Prime Video / Random
 You Tube	 Yellow / YouTube / Repeat
 Google Play	 Green / APP / Repeat
 <<	 << / Tune-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Guía	 Guide / EPG / -/--
 Up	 Up
 TV	 TV/Radio /
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 Back	 Back / Return
 Down	 Down
 Home	 Menu / Home
 Vol+	 Vol+
 Smart	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9





Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer				
	0		0				
	(>)		Fav / Marker / PC				

