












 

 



 

 

 

 



 
 


 






 











 






 





 
 




Original	Replacement	Original	Replacement
 Power	 Power	 -/-- / +10	 Shift + Guide
 Mute	 Mute	 Recall / Program	 Back
 Source	 AV	 TV Menu	 Menu
 P Mode	 Format	 Exit	 Exit
 S Mode	 Shift + Dual	 Goto / Text	 Text
 Audio I / II	 Dual	 Display	 Info
 Sleep	 Sleep	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK / Enter	 Ok
 5	 5	 V -	 Vol -
 6	 6	 V +	 Vol +
 7	 7	 P -	 Ch -
 8	 8	 P +	 Ch +
 9	 9	 Red / DVD	 Red
 0 / 10	 0	 Green / A-B	 Green





Original		Replacement		Original	Replacement
	Yellow / Angle		Yellow		
	Blue / Repeat		Blue		
	Subtitle		Subt		
	Play / Pause /		Play		
	Size		3D		
	D.Dis / Reveal		Smart		
	D.Menu / Mix		D. Menu		
	Zoom / Index		Shift + Eject		
	I<< / Fav		I<<		
	I<< / Fav		Pre Ch		
	>>I / Subpage		>>I		
	Stop / Language		Stop		
	<< / Fav -		<<		
	>> / Fav +		>>		
	Eject / EPG		Guide		
	Eject / EPG		Eject		

