





 



 

 

 

 

 



 



 



 

 

 

 

 

 

 

 

 



 

 



















Original		Replacement		Original		Replacement	
	Power		Power		CHN List		Smart / List
	Mute		Mute / Dimmer		0		0
	Picture		Picture / Format		Return / Back		Back / Return
	Sound		Sound / Title		Menu		Menu / Home
	Zoom		Zoom / Size		Up		Up
	Subtitle		Subtitle / EQ		Source		AV / Input / RDS
	EPG		Guide / EPG / -/--		Left		Left
	FAV		Fav / Marker / PC		Enter		OK
	1		1		Right		Right
	2		2		Down		Down
	3		3		Exit		Exit / Cancel / Clear
	4		4		TV / Radio		TV/Radio /
	5		5		Vol +		Vol+
	6		6		Home		D.Menu / Top
	7		7		PR +		CH+ / Page+
	8		8		Vol -		Vol-
	9		9		PR -		CH- / Page-



