

 



 







 



 

 





 



 

 

 



 







 



 



 

 

 





 














Original	Replacement	Original	Replacement
	Power		Power
	Up		Up
	Left		Left
	Right		Right
	Down		Down
	M Menu		Menu / Home
	[i] Info		Info / Angle
	OK		OK
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	P < P		Display / Media
	0		0
	Aspect		Picture / Format
	Swap		Back / Return
	P - / CH -		CH- / Page-
	P + / CH +		CH+ / Page+
	Vol -		Vol-
	Vol +		Vol+
	Mute		Mute / Dimmer
	I - II		Audio / Lang I/II
	[TV]		Smart / List
	Source		AV / Input / RDS
	Red / PIP		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Text		Text / Goto





	Original	Replacement	Original	Replacement
	Timer	 Sleep / Timer		
	Hold	 Stop / Hold		
	Cancel	 Exit / Cancel / Clear		
	Mix	 +  Shift + Text /		
	Size	 Zoom / Size		
	Help	 Setup / OPT /		
	Index	 D.Menu / Top		

