















 





 





















 

 



 

 



 

 





 
 
 
 




	Original	Replacement		Original	Replacement
	Power		Power		ZAP
	Source		AV		Format
	TV		TV/R		Mute
	VIDEO		Smart		PIP
	PC		Media		Text
	1		1		Up / P+
	2		2		Up / P+
	3		3		Down / P-
	4		4		Down / P-
	5		5		Right / Vol+
	6		6		Right / Vol+
	7		7		Left / Vol-
	8		8		Left / Vol-
	9		9		Menu
	0		0		PIP Swap
	i		Info		Auto
	List		List		Sound
					Pre Ch
					Format
					Mute
					3D
					Text
					Up
					Ch +
					Down
					Ch -
					Right
					Vol +
					Left
					Vol -
					Menu
					Back
					Options
					Dual





Original	Replacement
Freeze / Hold	+  Shift + Stop
<<<	<<<
Play	Play
>>>	>>>
Rec	Rec
Stop	Stop
Pause	Pause
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
F1	+  Shift + 1
F2	+  Shift + 2
F3	+  Shift + 3
F4	+  Shift + 4
P-Pos	+  Shift + Ch +
P-Size	+  Shift + Ch -

Original	Replacement
Clock / Mix	+  Shift + Text

