 






Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Tv/AV		AV / Input / RDS		Zoom		Zoom / Size
	1		1		P-		CH- / Page-
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK/Select		OK
	5		5		Right		Right
	6		6		Menu		Menu / Home
	7		7		Down		Down
	8		8		Mute		Mute / Dimmer
	9		9		Red / Picture		Red / Netflix / Search
	0		Shift + Guide / EPG / -/--		Red / Picture		Picture / Format
	0		0		Green / Sound		Green / APP / Repeat
	Back		Back / Return		Green / Sound		Sound / Title
	Vol+		Vol+		Yellow / Sleep		Yellow / YouTube / Repeat
	Scan		Smart / List		Yellow / Sleep		Sleep / Timer
	P+		CH+ / Page+		Blue / Call		Blue / Prime Video / Random





Original		Replacement	
	Text		Text / Goto
	Mix		Shift + Text /
	Size		Shift + Zoom /
	Index		Rec / Rec Mode
	Hold		Stop / Hold
	Reveal		Play / Slow
	Subpage		Subtitle / EQ
	Cancel		Exit / Cancel / Clear
	DVB Menu		D.Menu / Top
	i		Info / Angle
	EPG		Guide / EPG / -/--
	ESC		Fav / Marker / PC
	DVB		Display / Media
	Freeze		Pause / Step / Freeze
	I/II		Audio / Lang I/II

Original		Replacement	

