





 

 
 


 

 
 

 

 










Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 SHIFT + -/-- Shift + Guide
 Recall	 RETURN BACK Back
 SOURCE Source	 TIMER AV AV
 P.STD P.STD	 HOME SMART Smart

Original	Replacement
 S.STD S.STD	 APP MEDIA Media
 MENU/ATV Menu/ATV	 TOP MENU MENU Menu
 Up Up	 Up Up
 Right Right	 Right Right
 Down Down	 Down Down
 Left Left	 Left Left
 OK OK	 OK Ok
 Vol+ Vol +	 + VOL Vol +
 Vol- Vol -	 VOL - Vol -
 PR- Ch -	 CH - Ch -
 PR+ Ch +	 + CH Ch +
 Freeze Freeze	 II Pause
 Info/Display Info	 DISPLAY INFO Info
 Menu/DVB Menu/DVB	 E-MANUAL D.MENU D. Menu
 TTX [.]≡/TTX Text	 REPEAT TEXT Text
 I/II I/II	 SOUND DUAL Dual
 [≡x]/Exit Exit	 CLEAR EXIT Exit



