









 

 

 
 
 
 

 
 
 
 
 
 


 
 



 
 



 
 
 
 


 
 
 
 
 
 
 
 



 







 
 






 


 



 



 

 
 
Original	Replacement	Original	Replacement
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down

Original	Replacement	Original	Replacement
 Power	 Power	 Vol -	 Vol -
 Mute	 Mute	 CH +	 Ch +
 1	 1	 CH -	 Ch -
 2	 2	 Exit	 Exit
 3	 3	 Red / USB Left	 Red
 4	 4	 Red / USB Left	 Shift + Left
 5	 5	 Green / USB	 Green
 6	 6	 Green / USB	 Shift + Down
 7	 7	 Yellow / USB Up	 Yellow
 8	 8	 Yellow / USB Up	 Shift + Up
 9	 9	 Blue / USB Right	 Blue
 0	 0	 Blue / USB Right	 Shift + Right
 10+	 Shift + Guide	 Up	 Up
 SUBTL	 Subt	 Left	 Left
 EPG	 Guide	 Enter	 Ok
 Menu	 Menu	 Right	 Right
 Vol +	 Vol +	 Down	 Down




 


 
 

 
 

 
 




 
 
 


 

 
 

 





 



	Original	Replacement		Original	Replacement
	QV	 Options			Size
	FAV	 Pre Ch			Prog / Mix
	Source	 AV			Prog / Mix
	Sleep	 Sleep			Return / SUBPG
	Picture	 Shift + Format			Repeat / Reveal
	Sound	 Shift + Dual			Search / Hold
	Display	 Info			
	I/II / Top	 Dual			
	FAV - / REV	 <<			
	FAV + / FWD	 >>			
	USR/CR / Text	 Media			
	USR/CR / Text	 Text			
	Play/Pause / Index	 Play			
	Play/Pause / Index	 Shift + Info			
	Play/Pause / Index	 Pause			
	Stop / Cancel	 Stop			
	Stop / Cancel	 Shift + Exit			

	Original	Replacement
	Size	 Format
	Prog / Mix	 Smart
	Prog / Mix	 Shift + Sleep
	Return / SUBPG	 Back
	Repeat / Reveal	 Shift + Back
	Search / Hold	 TV/R





Original	Replacement	Original	Replacement
	 Power		 9
	 AV		 0
	 Exit		 Guide
	 Menu		 Up
	 Dual		 Right
	 Media		 Ok
	 Options		 Left
	 Text		 Down
	 TV/R		 Subt
	 1		 Pause
	 2		 Rec
	 3		 <<
	 6		 Play
	 5		 >>
	 4		 Shift + Media
	 7		 Shift + Dual
	 8		 Shift + 6

