
 




Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Tv/AV		AV / Input / RDS		Zoom		Zoom / Size
	1		1		P-		CH- / Page-
	2		2		Up		Up
	3		3		Left		Left
	4		4		OK/Select		OK
	5		5		Right		Right
	6		6		Menu		Menu / Home
	7		7		Down		Down
	8		8		Mute		Mute / Dimmer
	9		9		Red / Picture		Red / Netflix / Search
	0		Shift + Guide / EPG / -/--		Red / Picture		Picture / Format
	0		0		Green / Sound		Green / APP / Repeat
	Back		Back / Return		Green / Sound		Sound / Title
	Vol+		Vol+		Yellow / Sleep		Yellow / YouTube / Repeat
	Scan		Smart / List		Yellow / Sleep		Sleep / Timer
	P+		CH+ / Page+		Blue / Call		Blue / Prime Video / Random





Original	Replacement
Text	Text / Goto
Mix	Shift + Text /
Size	Shift + Zoom /
Index	Rec / Rec Mode
Hold	Stop / Hold
Reveal	Play / Slow
Subpage	Subtitle / EQ
Cancel	Exit / Cancel / Clear
DVB Menu	D.Menu / Top
i	Info / Angle
EPG	Guide / EPG / -/--
ESC	Fav / Marker / PC
DVB	Display / Media
Freeze	Pause / Step / Freeze
I/II	Audio / Lang I/II

Original	Replacement

