

 

 


 
 





 

 

 

 



 

 

 
 
 








Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Tuner		Red
	DVD		Green
	USB		Yellow
	iPod		Blue
	P-EQ		Text
	OSD/DIM		3D
	Mode		TV/R
	Program		D. Menu
	Title		Info
	Subtitle		Subt
	Zoom		Eject
	Audio		Dual
	Setup		Options
	Menu		Menu
	Clock		AV
	Sleep/Timer		Sleep
	Up		Up
	Down		Down
	>>		>>
	<<		<<
	Enter		Ok
	+		Right
	-		Left
	>>		>>
	<<		<<
	Play		Play
	Pause		Pause
	Stop		Stop
	Goto		Pre Ch
	1		1
	2		2
	3		3





	Original	Replacement	Original	Replacement
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	P+			
	P-			
	Vol+			
	Vol-	