










 



 





 



 

 



 












 



 

 

 

 

 




 









Original	Replacement	Original	Replacement
 Power	 Power	 Stop	 Stop
 CH/Level Up	 Ch +	 <<	 <<
 CH/Level Down	 Ch -	 >>	 >>
 Vol+	 Vol +	 <<	 <<
 Vol-	 Vol -	 >>	 >>
 Mute	 Mute	 1	 1
 Marker	 Media	 2	 2
 Up	 Up	 3	 3
 Down	 Down	 4	 4
 Right	 Right	 5	 5
 Left	 Left	 6	 6
 Enter	 Ok	 7	 7
 Setup	 Options	 8	 8
 Menu	 Menu	 9	 9
 Display / Sleep	 Info	 0	 0
 Display / Sleep	 Sleep	 6CH Dir	 3D
 Return/Dimmer	 Back	 CH Sel	 TV/R





Original	Replacement
ADJUST	DISC NAV LIST
DELAY	CLEAR EXIT
P.SCAN	E-MANUAL D.MENU
T.TONE	REPEAT TEXT
AUTO	AD SUBT
DSP	TIMER AV
STEREO	SOUND DUAL
CD	B
AUDIO	A
AUX	C
TV	D
VCR	SHIFT + A
SAT	SHIFT + D
CABLE	SHIFT + C
DVD	SHIFT + B
POWER	SHIFT +
P.SCAN	SHIFT + HOME SMART

Original	Replacement
	SHIFT +
	SHIFT +
	SHIFT +
	SHIFT +
	SHIFT +
	SHIFT +
	SHIFT +
	SHIFT +





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 CABLE	 Shift + Yellow
 SAT	 Shift + Blue
 TV Power	 Power
 TV CH/Level +	 Ch +
 TV CH/Level -	 Ch -
 TV CH Sel.	 Media
 TV Mute	 Mute
 TV Volume +	 Vol +
 TV Volume -	 Vol -
 TV 1	 1
 TV 2	 2

Original	Replacement
 TV 3	 3
 TV 4	 4
 TV 5	 5
 TV 6	 6
 TV 7	 7
 TV 8	 8
 TV 9	 9
 TV 0	 0
 CABLE Power	 Shift + Power
 CABLE CH/Level +	 Shift + Ch +
 CABLE CH/Level -	 Shift + Ch -
 CABLE CH Sel.	 Shift + Smart
 CABLE Mute	 Shift + Mute
 CABLE Volume +	 Shift + Vol +
 CABLE Volume -	 Shift + Vol -
 CABLE 1	 Shift + 1
 CABLE 2	 Shift + 2





	Original	Replacement	
AUX 3	CABLE 3	SHIFT + 3	Shift + 3
TAPE 4	CABLE 4	SHIFT + 4	Shift + 4
5	CABLE 5	SHIFT + 5	Shift + 5
VIDEO1 6	CABLE 6	SHIFT + 6	Shift + 6
VIDEO2 7	CABLE 7	SHIFT + 7	Shift + 7
VIDEO3 8	CABLE 8	SHIFT + 8	Shift + 8
9	CABLE 9	SHIFT + 9	Shift + 9
0	CABLE 0	SHIFT + 0	Shift + 0

Original	Replacement





Original	Replacement
 AUDIO	 Red
 CD	 Green
 AUX	 Yellow
 TV	 Blue
 VCR	 Shift + Red
 DVD	 Shift + Green
 SAT	 Shift + Blue
 CABLE	 Shift + Yellow
 DVD Power	 Power
 DVD P.Scan	 Smart
 DVD T.Tone	 Options
 DVD Audio Sel.	 Dual
 DVD Subtitle	 Subt
 DVD Zoom	 3D
 DVD Marker	 Pre Ch
 DVD Menu	 Menu
 DVD Up	 Up

Original	Replacement
 DVD Left	 Left
 DVD Enter	 Ok
 DVD Right	 Right
 DVD Down	 Down
 DVD Display	 Info
 DVD Pause	 Pause
 DVD Play	 Play
 DVD Stop	 Stop
 DVD <<	 <<
 DVD >>	 >>
 DVD I<<	 I<<
 DVD >>I	 >>I
 DVD 1	 1
 DVD 2	 2
 DVD 3	 3
 DVD 4	 4
 DVD 5	 5





	Original	Replacement	
	DVD 6		6
	DVD 7		7
	DVD 8		8
	DVD 9		9
	DVD 0		0
	SAT Power	+	Shift + Power
	SAT CH/Level +	+	Shift + Ch +
	SAT CH/Level -	+	Shift + Ch -
	SAT CH Sel.	+	Shift + Media
	SAT Mute	+	Shift + Mute
	SAT Volume +	+	Shift + Vol +
	SAT Volume -	+	Shift + Vol -
	SAT 1	+	Shift + 1
	SAT 2	+	Shift + 2
	SAT 3	+	Shift + 3
	SAT 4	+	Shift + 4
	SAT 5	+	Shift + 5

	Original	Replacement	
	SAT 6	+	Shift + 6
	SAT 7	+	Shift + 7
	SAT 8	+	Shift + 8
	SAT 9	+	Shift + 9
	SAT 0	+	Shift + 0





	Original	Replacement	
	AUDIO	 Red	
	CD	 Green	
	AUX	 Yellow	
	TV	 Blue	
	VCR	 +  Shift + Red	
	SAT	 +  Shift + Blue	
	CABLE	 +  Shift + Yellow	
	DVD	 +  Shift + Green	
	CD P.Scan	 Smart	
	CD Pause	 Pause	
	CD Play	 Play	
	CD Stop	 Stop	
	CD I<<	 I<<	
	CD >>I	 >>I	
	CD 1	 1	1
	CD 2	 2	2
	CD 3	 3	3

	Original	Replacement	
	CD 4	 4	4
	CD 5	 5	5
	CD 6	 6	6
	CD 7	 7	7
	CD 8	 8	8
	CD 9	 9	9
	CD 0	 0	0
	VCR Power	 +  Shift + Power	
	VCR CH Sel.	 +  Shift + Media	
	VCR Rec	 +  Shift + Rec	
	VCR Play	 +  Shift + Play	
	VCR Mute	 +  Shift + Mute	
	VCR >>	 +  Shift + >>	
	VCR <<	 +  Shift + <<	
	VCR Volume -	 +  Shift + Vol -	
	VCR Volume +	 +  Shift + Vol +	
	VCR CH/Level +	 +  Shift + Ch +	





Original	Replacement	Original	Replacement
 VCR CH/Level -	 +  Shift + Ch -		
 VCR P.Scan	 +  Shift + Smart		
 VCR Pause	 +  Shift + Pause		
 VCR Stop	 +  Shift + Stop		
 VCR 1	 +  Shift + 1		
 VCR 2	 +  Shift + 2		
 VCR 3	 +  Shift + 3		
 VCR 4	 +  Shift + 4		
 VCR 5	 +  Shift + 5		
 VCR 6	 +  Shift + 6		
 VCR 7	 +  Shift + 7		
 VCR 8	 +  Shift + 8		
 VCR 9	 +  Shift + 9		
 VCR 0	 +  Shift + 0		

Original	Replacement

