

 






 
 
 
 




 
 
 

 
 

 

 
 


 

 
 
 


 
 





Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Dimmer	 Media
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 >10	 Guide
 Repeat	 Text
 Goto	 3D

Original	Replacement
 A-B	 TV/R
 Program	 Shift + Sleep
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Title	 List
 Menu/PBC	 Menu
 Return	 Back
 Setup	 Options
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Stop	 Stop
 Play/Pause	 Play
 Play/Pause	 Pause





Original		Replacement		Original		Replacement	
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	Language		Dual				
	Subtitle		Subt				
	PAL/NTSC		Format				
	Audio		Shift + Dual				
	Zoom		Shift + Eject				
	Angle		Smart				
	Slow		AV				
	Display		Info				
	Nothing		Pre Ch				

