 











 


 


 
 

 
 
 


 
 




 












 











 

 
 
 

 

 






Original		Replacement		Original		Replacement	
	Power		Power		Tv Menu		Menu
	Mute		Mute		-/--		Shift + Guide
	1		1		Guide		Guide
	2		2		Source		AV
	3		3		Enter		Ok
	4		4		Up		Up
	5		5		Down		Down
	6		6		Right		Right
	7		7		Left		Left
	8		8		CH-		Ch -
	9		9		CH+		Ch +
	0		0		Vol-		Vol -
	Recall		Pre Ch		Vol+		Vol +
	Audio/Nicam		Dual		Text		Text
	Display		Shift + Info		<<		<<
	Exit		Exit		>>		>>
	Auto		Smart		Hold		Options



