

















 




 






 

 
 
 



 
 






 



Original	Replacement
 Power	 Power
 Mute	 Mute
 Display	 Info
 Mode	 List
 Timer	 AV
 TV/R	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 SAT	 D. Menu

Original	Replacement
 F1	 Shift + 1
 FUNC	 3D
 Sub	 Subt
 [++]	 Format
 TXT	 Text
 Find	 Shift + TV/R
 EPG	 Guide
 Pause	 Shift + Pause
 Sleep	 Sleep
 Red/Audio	 Red
 Green/Recall	 Green
 Yellow/Zoom	 Yellow
 Blue/Info	 Blue
 FAV	 Pre Ch
 Help	 Dual
 Menu	 Menu
 Exit	 Exit





Original		Replacement		Original		Replacement	
	Up		Up		Stop		Stop
	Down		Down		Rec		Rec
	Right		Right		F2		Shift + 2
	Left		Left		F3		Shift + 3
	OK		Ok		F4		Shift + 4
	Back		Back		F5		Shift + 5
	USB		Media				
	Vol+		Vol +				
	Vol-		Vol -				
	Page+		Ch +				
	Page-		Ch -				
	<<		<<				
	>>		>>				
	I<<		I<<				
	>>I		>>I				
	Play		Play				
	Pause		Pause				

