
















 


















| Original | Replacement | Original | Replacement |
|----------|---|----------|---|
| Power |  Power | Setup |  Setup / OPT / |
| Mute |  Mute / Dimmer | Subtitle |  Subtitle / EQ |
| Menu |  Menu / Home | Vol+ |  Vol+ |
| Exit |  Exit / Cancel / Clear | Vol- |  Vol- |
| 1 |  1 | >> |  >> / Preset+ |
| 2 |  2 | << |  << / Preset- |
| 3 |  3 | Up |  Up |
| 4 |  4 | Left |  Left |
| 5 |  5 | OK |  OK |
| 6 |  6 | Right |  Right |
| 7 |  7 | Down |  Down |
| 8 |  8 | Canc |  Back / Return |
| 9 |  9 | DVI |  AV / Input / RDS |
| 0 |  0 | Info |  Info / Angle |
| +10 |  Guide / EPG / -/-- | Title |  Sound / Title |
| Display |  Display / Media | Bookmark |  Fav / Marker / PC |
| Zoom |  Zoom / Size | Eject |  Eject / Surround |



| Original | Replacement | Original | Replacement |
|------------|--|----------|-------------|
| Pause |  Pause / Step / Freeze | | |
| Stop |  Stop / Hold | | |
| Angle |  +  Shift + Info / Angle | | |
| << |  << / Tune- | | |
| Play |  Play / Slow | | |
| >> |  >> / Tune+ | | |
| Audio |  Audio / Lang I/II | | |
| PSM |  Picture / Format | | |
| Keyboard |  Smart / List | | |
| I-Scan |  CH+ / Page+ | | |
| P-Scan |  CH- / Page- | | |
| P/N |  D.Menu / Top | | |
| Slow |  +  Shift + Play / | | |
| Repeat |  Green / APP / Repeat | | |
| Repeat A-B |  Yellow / YouTube / Repeat | | |
| | | | |
| | | | |

