 





Original	Replacement
	Mute / Dimmer
	Fav / Marker / PC
	Power
	Info / Angle
	Smart / List
	1
	2
	3
	Stop / Hold
	4
	5
	6
	Subtitle / EQ
	7
	8
	9
	Display / Media

Original	Replacement
	AV / Input / RDS
	0
	Guide / EPG / -/--
	Shift + Text /
	Text / Goto
	CH+ / Page+
	Up
	Menu / Home
	Left
	Vol-
	OK
	Right
	Vol+
	Back / Return
	CH- / Page-
	Down
	Setup / OPT /



