


 

 



 

 





Original	Replacement
 Power Receiver	 Power
 Power Source	 Shift + Power
 Tuner	 Red
 USB	 Green
 Net	 Yellow
 Phono	 Blue
 Party	 Smart
 HDMI Out	 Media
 Program Up	 Ch +
 Program Down	 Ch -
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Pop-Up Menu	 Menu
 Top Menu	 Shift + Menu
 Option	 Options
 Display	 Shift + Info

Original	Replacement
 Return	 Back
 On Screen	 Eject
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Play/Band	 Play
 Pause	 Pause
 Stop	 Stop
 Mode	 3D
 Tuning >>	 >>
 << Tuning	 <<
 Preset >>	 >>
 I<< Preset	 I<<
 Movie	 Subt
 Music	 Dual





 


 


 





Original	Replacement
 Sur. Decode	 TV/R
 Straight	 AV
 Sleep	 Sleep
 Info	 Info
 Enhancer	 Format
 Pure Direct	 List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10/Memory	 Guide

Original	Replacement
 ENT.	 Pre Ch
 HDMI 1	 Shift + 1
 HDMI 2	 Shift + 2
 HDMI 3	 Shift + 3
 HDMI 4	 Shift + 4
 HDMI 5	 Shift + 5
 HDMI 6	 Shift + 6
 HDMI 7	 Shift + 7
 V-AUX	 Shift + 8
 AV 1	 Shift + 9
 AV 2	 Shift + Guide
 AV 3	 Shift + 0
 AV 4	 Shift + Pre Ch
 AV 5	 Shift + Smart
 AV 6	 Shift + Media
 Audio 1	 Shift + Right
 Audio 2	 Shift + Left













 







 

 














 

 
 



 
 
 
 
 
 



 
 
 
















Original	Replacement
 BD/DVD Scene	 +  Shift + Red
 TV Scene	 +  Shift + Green
 NET Scene	 +  Shift + Yellow
 Radio Scene	 +  Shift + Blue

Original	Replacement

 
 








Original	Replacement	Original	Replacement
 Power Receiver	 Power	 Enter	 Ok
 Power Source	 Shift + Power	 Play/Band	 Play
 Party	 Smart	 Pause	 Pause
 HDMI Out	 Media	 Stop	 Stop
 Mute	 Mute	 Mode	 3D
 Volume+	 Vol +	 Tuning >>	 >>
 Volume-	 Vol -	 << Tuning	 <<
 Pop-Up Menu	 Menu	 Preset >>	 >>
 Top Menu	 Shift + Menu	 I<< Preset	 I<<
 Option	 Options	 Info	 Info
 Display	 Shift + Info	 Sleep	 Sleep
 Return	 Back	 1	 1
 On Screen	 Eject	 2	 2
 Up	 Up	 3	 3
 Down	 Down	 4	 4
 Right	 Right	 5	 5
 Left	 Left	 6	 6





Original	Replacement
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Original	Replacement
	
	
	
	
	
	
	
	
	
	
	
	
	

