



	Original	Replacement	Original	Replacement
	 On/Off	 Power	 Display	 Display / Media
	 Sleep	 Sleep / Timer	 Play	 Play / Slow
	 iPod	 Fav / Marker / PC	 Pause	 Pause / Step / Freeze
	 FM	 6	 ▾	 CH- / Page-
	 AUX	 7	 DSP	 AV / Input / RDS
	 < Preset	 Left	 Random	 Blue / Prime Video / Random
	 Preset >	 Right	 Repeat	 Green / APP / Repeat
	 <<Tuning	 << / Tune-	 Mute	 Mute / Dimmer
	 Tuning >>	 >> / Tune+	 Vol-	 Vol-
	 Memory FM	 Smart / List	 Vol+	 Vol+
	 Clock/Set	 D.Menu / Top		
	 Function	 Setup / OPT /		
	 Menu	 Menu / Home		
	 ▲	 CH+ / Page+		
	 I<<	 I<< / Preset-		
	 Ok	 OK		
	 >>I	 >>I / Preset+		

