





















 







 









 









 

 

 


 



 


 













 
 
 

 





 

 

 


 






Original		Replacement		Original		Replacement	
	Power		Power		CH +		CH+ / Page+
	Mute		Mute / Dimmer		Vol -		Vol-
	1		1		Input		AV / Input / RDS
	2		2		CH -		CH- / Page-
	3		3		Up		Up
	4		4		Left		Left
	5		5		Enter		OK
	6		6		Right		Right
	7		7		Menu		Menu / Home
	8		8		Down		Down
	9		9		Exit		Exit / Cancel / Clear
	-/--		Shift + Guide / EPG / -/--		Display		Display / Media
	0		0		PMode		Picture / Format
	Recall		Back / Return		S.Mode		Sound / Title
	Vol +		Vol+		Sleep		Sleep / Timer
	Aspect		Shift + Picture / Format		FAV		Fav / Marker / PC
	Nicam		Audio / Lang I/II		FAV -		Shift + Down





Original	Replacement
 FAV +	 Shift + Up
 EPG	 Guide / EPG / -/--
 Text	 Text / Goto
 Hold	 Shift + Stop /
 Lang	 Shift + Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Index / <<<	 <<< / Tune-
 Index / <<<	 Info / Angle
 Size / >>>	 >>> / Tune+
 Size / >>>	 Zoom / Size
 Reveal / I<<<	 I<<< / Preset-
 Subpage / >>>I	 >>>I / Preset+
 Subpage / >>>I	 Eject / Surround
 Rec	 Rec / Rec Mode
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Replacement
 Media	 Shift + Display / Media
 Red / TV/Radio	 TV/Radio /
 Red / TV/Radio	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

