



Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Lang	Audio / Lang I/II
Tv/Radio	TV/Radio /
Game	D.Menu / Top
FAV	Fav / Marker / PC
Recall	Back / Return

Original	Replacement
Dev.List	Display / Media
EPG	Guide / EPG / -/-
Subtitle	Subtitle / EQ
Text	Text / Goto
Info	Info / Angle
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Zoom	Zoom / Size
Timeshift	Setup / OPT /
CH+	CH+ / Page+
CH-	CH- / Page-
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
Vol+	Vol+





Original	Replacement	Original	Replacement
Vol-	Vol-		
Rec	Rec / Rec Mode		
Stop	Stop / Hold		
Play	Play / Slow		
Pause	Pause / Step / Freeze		
<<	<< / Tune-		
>>	>> / Tune+		
<<	<< / Preset-		
>>	>> / Preset+		
Filelist	Smart / List		
Red/FAV/Daily	Red / Netflix / Search		
Green/DEL/Weekl	Green / APP / Repeat		
Yellow/Move/P.Inf	Yellow / YouTube / Repeat		
Blue/Lock/Timer	Blue / Prime Video / Random		

Original	Replacement

