


 

 

 





 



 





 
 



 









Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Display	 Info
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual

Original	Replacement
 Sleep	 Sleep
 EPG	 Guide
 FAV	 Pre Ch
 FAV-	 Shift + Ch -
 FAV+	 Shift + Ch +
 Aspect	 3D
 Input	 AV
 Nicam	 Smart
 LCD Menu	 Menu
 Exit	 Exit
 Eject	 Eject
 DVD Setup	 D. Menu
 CH+	 Ch +
 CH-	 Ch -
 Up	 Up
 Down	 Down
 Right	 Right





Original	Replacement	Original	Replacement
	Left		Play
	OK		Pause
	Vol+		Stop
	Vol-		Media
	D.Menu/Text		Tv/Radio
	D.Disp/Hold		Red/Prog
	Zoom/Lang		Green/Intro
	Subtitle		Yellow/Repeat
	Goto/Index		Blue/A-B
	Audio/Size		
	Title/Subpage		
	Angle/Reveal		
	<<		
	>>		
	I<<		
	>>I		
	Rec		
	Left		Play
	Ok		Pause
	Vol +		Stop
	Vol -		Media
	Text		TV/R
	List		Red
	Dual		Green
	Subt		Yellow
	Shift + List		Blue
	Format		
	Shift + Subt		
	Options		
	<<		
	>>		
	I<<		
	>>I		
	Rec		

