



Original		Replacement		Original		Replacement	
	Power		Power		Down		Down
	Mute		Mute		PMode		Format
	Exit		Exit		SMode		Shift + Dual
	Goto / Text		Text		1		1
	Audio / I/II		Dual		2		2
	Display		Info		3		3
	Sleep		Sleep		4		4
	P-		Ch -		5		5
	P+		Ch +		6		6
	V-		Vol -		7		7
	V+		Vol +		8		8
	Source		AV		9		9
	TV Menu		Menu		0		0
	Up		Up		-/-- / +10		Shift + Guide
	Left		Left		Recall / Prog		Back
	Enter		Ok		Red / D.Setup		Red
	Right		Right		Red / D.Setup		Options



