 



 

 

 



 
 


 
 


 


 

 

 


 
 
 

 



 

 

 



 





 
 
 


 




 





Original	Replacement	Original	Replacement
 Power	 Power	 +10	 Pre Ch
 Open/Close	 Eject	 Mute	 Mute
 Subtitle	 Subt	 N/P	 Format
 Angle/Del	 Exit	 PBC	 3D
 Language	 Dual	 OSD	 Smart
 Return	 Back	 Setup	 Options
 Time	 Shift + AV	 Title/TTX	 Text
 1	 1	 Menu	 Menu
 2	 2	 Prog/EPG	 Guide
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Right	 Right
 6	 6	 Left	 Left
 7	 7	 Enter	 Ok
 8	 8	 Play	 Play
 9	 9	 Stop	 Stop
 0/10	 0	 Pause	 Pause





Original	Replacement	Original	Replacement
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Tv/Radio		TV/R
	Source		AV
	L/R		Media
	Slow		Sleep
	Rec		Rec
	Step		List
	Vol+		Vol +
	Vol-		Vol -
	Red/Repeat		Red
	Green/A-B		Green
	Yellow/Zoom		Yellow
	Blue/Clear		Blue

