



| Original | Replacement |
|--|---|
|  Power |  Power |
|  Source |  AV / Input / RDS |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  TV |  TV/Radio / |
|  0 |  0 |
|  Recall |  Shift + Back / Return |
|  Vol+ |  Vol+ |
|  Mute |  Mute / Dimmer |
|  PR+ |  CH+ / Page+ |

| Original | Replacement |
|---|---|
|  Vol- |  Vol- |
|  World/Internet |  Smart / List |
|  PR- |  CH- / Page- |
|  Menu |  Menu / Home |
|  Q.Menu |  D.Menu / Top |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Back |  Back / Return |
|  Exit |  Exit / Cancel / Clear |
|  i |  Info / Angle |
|  Camera/Music/Ph |  Picture / Format |
|  Guide |  Guide / EPG / -/- |
|  */o |  Shift + Guide / EPG / -/- |
|  */o.. |  Fav / Marker / PC |





| Original | Replacement | Original | Replacement |
|----------|-----------------------------|----------|-------------|
| [≡]/Text | Text / Goto | | |
| Red | Red / Netflix / Search | | |
| Green | Green / APP / Repeat | | |
| Yellow | Yellow / YouTube / Repeat | | |
| Blue | Blue / Prime Video / Random | | |
| LANG. | Audio / Lang I/II | | |
| [≡].. | Shift + Text / | | |
| [-o-] | Setup / OPT / | | |
| << | << / Tune- | | |
| | Pause / Step / Freeze | | |
| >> | >> / Tune+ | | |
| Rec | Rec / Rec Mode | | |
| Play | Play / Slow | | |
| Stop | Stop / Hold | | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

