





 















 











 










 





 












 





Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Home	 D.Menu / Top
 3	 3	 Down	 Down
 4	 4	 Exit	 Exit / Cancel / Clear
 5	 5	 Netflix	 Shift + Red / Netflix /
 6	 6	 Vol+	 Vol+
 7	 7	 Info	 Info / Angle
 8	 8	 PR+	 CH+ / Page+
 9	 9	 Vol-	 Vol-
 CH List	 Smart / List	 EPG	 Guide / EPG / -/-
 0	 0	 PR-	 CH- / Page-
 Return/Back	 Back / Return	 Rec	 Rec / Rec Mode
 Menu	 Menu / Home	 Nicam I/II	 Audio / Lang I/II
 Up	 Up	 Text	 Text / Goto
 Source	 AV / Input / RDS	 AD/Subpage	 Sound / Title





	Original	Replacement		Original	Replacement
	FAV/Size	 Fav / Marker / PC			
	FAV/Size	 Zoom / Size			
	Quick/Hold	 Display / Media			
	Red	 Red / Netflix / Search			
	Green	 Green / APP / Repeat			
	Yellow	 Yellow / YouTube / Repeat			
	Blue	 Blue / Prime Video / Random			
	Play	 Play / Slow			
	Pause/Index	 Pause / Step / Freeze			
	<</Reveal	 << / Tune-			
	>>/Mix	 >> / Tune+			
	Stop/Cancel	 Stop / Hold			

	Original	Replacement		Original	Replacement

