 




 
 
 
 

 

 
 

 


 
 
 

 
 
 
 
 





 
 



 
 
 

 




 







 



 
 
 
 
 

 
 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	FAV		Pre Ch
	Subtitle		Subt
	Info		Info
	TTX		Text
	Recall		Back
	USB		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu
	Exit		Exit
	Up / CH +		Up
	Up / CH +		Ch +
	Down / CH -		Down
	Down / CH -		Ch -
	Right / Vol +		Right
	Right / Vol +		Vol +
	Left / Vol -		Left
	Left / Vol -		Vol -
	OK		Ok
	Pg Dn		Shift + Ch -
	Pg Up		Shift + Ch +
	>>		>>
	<<		<<
	>>		>>





Original		Replacement		Original	Replacement
	I<<		I<<		
	Play		Play		
	Pause		Pause		
	Stop		Stop		
	Audio		Dual		
	Repeat	 + 	Shift + Text		
	EPG		Guide		
	TV / Radio		TV/R		
	Sleep		Sleep		
	Red / Zoom		Red		
	Red / Zoom		Eject		
	Green / Aspect		Green		
	Green / Aspect	 + 	Shift + Format		
	Yellow / V-Format		Yellow		
	Yellow / V-Format		Format		
	Blue / Timer		Blue		
	Blue / Timer		Options		

