


 
 
 
 





 





Original	Replacement
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Shift + Guide / EPG / -/--
Recall	Back / Return
Sleep	Sleep / Timer
Audio	Audio / Lang I/II
Aspect	Shift + Picture / Format

Original	Replacement
Input	AV / Input / RDS
Info	Info / Angle
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK
Vol+	Vol+
Vol-	Vol-
FAV	Fav / Marker / PC
P.Mode	Picture / Format
S.Mode	Sound / Title
CH+	CH+ / Page+
CH-	CH- / Page-
Red	Red / Netflix / Search





Original	Replacement
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Shift + Menu /
	 Setup / OPT /
	 Display / Media
	 Text / Goto
	 Play / Slow
	 Guide / EPG / -/--
	 I<< / Preset-
	 Stop / Hold
	 Rec / Rec Mode
	 Zoom / Size
	 Pause / Step / Freeze
	 << / Tune-
	 TV/Radio /
	 >> / Tune+

Original	Replacement
	 Smart / List
	 Subtitle / EQ
	 >>I / Preset+
	 Eject / Surround

