Mandis shop

RM-SUXV20R

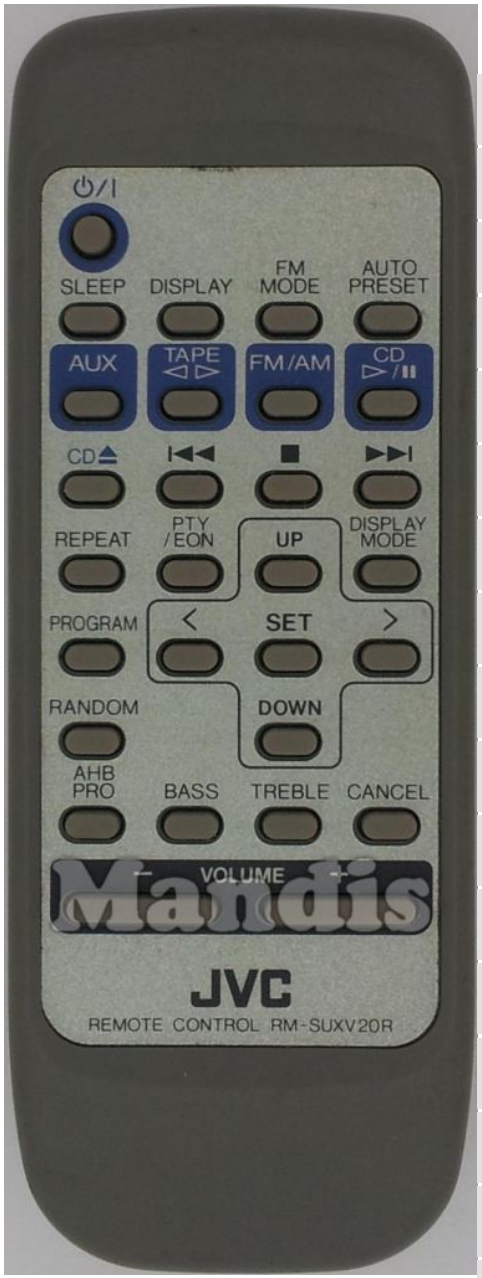

Original		Replacement	
	Power		Power
SLEEP	Sleep	PROG SLEEP	Sleep
DISPLAY	Display	DISPLAY INFO	Info
FM MODE	FM Mode	SEARCH TV/R	TV/R
AUTO PRESET	Auto Preset	APP MEDIA	Media
AUX	AUX	A	Red
TAPE	<> Tape	B	Green
FM/AM	FM/AM	C	Yellow
CD	Play CD	PLAY MODE	Play
CD	Pause CD		Pause
CD	CD Eject	FAV PRE-CH	Pre Ch
	I<<		I<<
	>>I		>>I
	Stop		Stop
REPEAT	Repeat	REPEAT TEXT	Text
PTY /EON	PTY/EON	-/-- GUIDE	Guide
DISPLAY MODE	Display Mode	DISC NAV LIST	List

Original		Replacement	
SET	Set	OK	Ok
UP	Up		Up
DOWN	Down		Down
	Right		Right
	Left		Left
PROGRAM	Program	SHIFT + PROG SLEEP	Shift + Sleep
RANDOM	Random	SETTINGS OPT	Options
AHB PRO	AHB PRO	PICTURE FORMAT	Format
BASS	Bass	SOUND DUAL	Dual
TREBLE	Treble	AD SUBT	Subt
CANCEL	Cancel	RETURN BACK	Back
	Vol-	VOL −	Vol -
	Vol+	+ VOL	Vol +

https://all-remote-controls.co.uk/en/JVC/1039606-12357-replacement-remote-control-for-JVC-RM-SUXV20R.html