Mandis shop

RC728

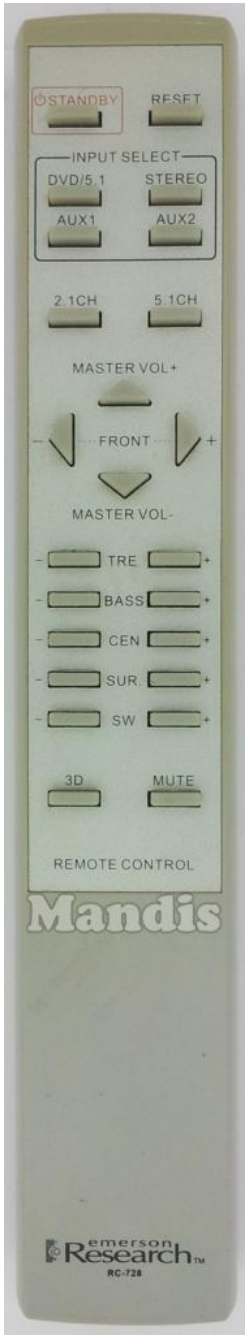

Original	Replacement	Original	Replacement
Standby	Power	Cen-	Down
Reset	Exit	Sur+	>>
DVD 5.1	Blue	Sur-	<<
Stereo	Yellow	SW+	>>I
AUX1	Red	SW-	I<<
AUX2	Green	Mute	Mute
2.1CH	Smart	3D	3D
5.1CH	Media		
Master Vol+	Vol +		
Master Vol-	Vol -		
Front+	Right		
Front-	Left		
Tre+	Ch +		
Tre-	Ch -		
Bass+	2		
Bass-	1		
Cen+	Up		

https://all-remote-controls.co.uk/en/Emerson/1055627-20141-replacement-remote-control-for-Emerson-RC-728.html