Mandis shop

# Panasonic N2QAYB000680

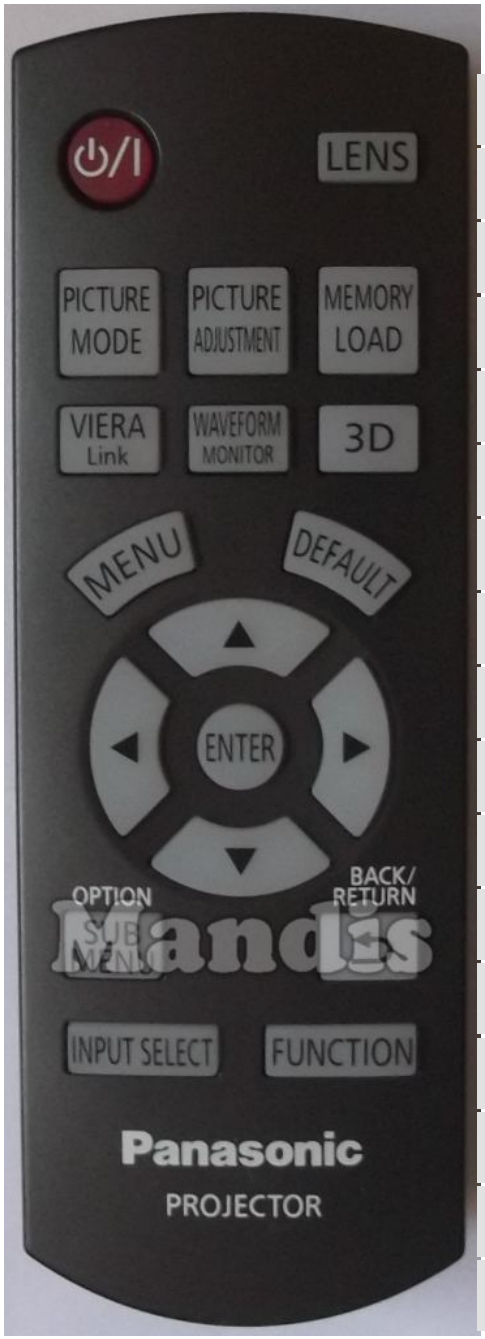


| Original | | Replacement | |
|---|---|---|---|
| ⏻/I | Power | ⏻ | Power |
| LENS | Lens | -/-- GUIDE EPG | Guide / EPG / -/-- |
| PICTURE MODE | Picture Mode | FORMAT PICTURE | Picture / Format |
| PICTURE ADJUSTMENT | Picture | SHIFT + FORMAT PICTURE | Shift + Picture / Format |
| PICTURE ADJUSTMENT | Picture | SIZE ZOOM | Zoom / Size |
| MEMORY LOAD | Memory Load | PC FAV MARKER | Fav / Marker / PC |
| VIERA Link | Viera Link | LIST SMART | Smart / List |
| WAVEFORM MONITOR | Waveform | MEDIA DISPLAY | Display / Media |
| 3D | 3D | EQ SUBTITLE | Subtitle / EQ |
| MENU | Menu | HOME MENU | Menu / Home |
| DEFAULT | Default | ANGLE INFO | Info / Angle |
| ▲ | Up | ▲ | Up |
| ◀ | Left | ◀ | Left |
| ENTER | Enter | OK | OK |
| ▶ | Right | ▶ | Right |
| ▼ | Down | ▼ | Down |
| OPTION SUB MENU | Sub Menu/Option | OPT-TOOLS SETUP | Setup / OPT / Tools |

| Original | | Replacement | |
|---|---|---|---|
| BACK/ RETURN | Back/Return | RETURN BACK | Back / Return |
| INPUT SELECT | Input Select | RDS AV INPUT | AV / Input / RDS |
| FUNCTION | Function | TOP MENU D.MENU | D.Menu / Top |

https://all-remote-controls.co.uk/en/Panasonic/1063878-66078-replacement-remote-control-for-Panasonic-N2QAYB000680.html