Mandis shop

Sony RMT-814

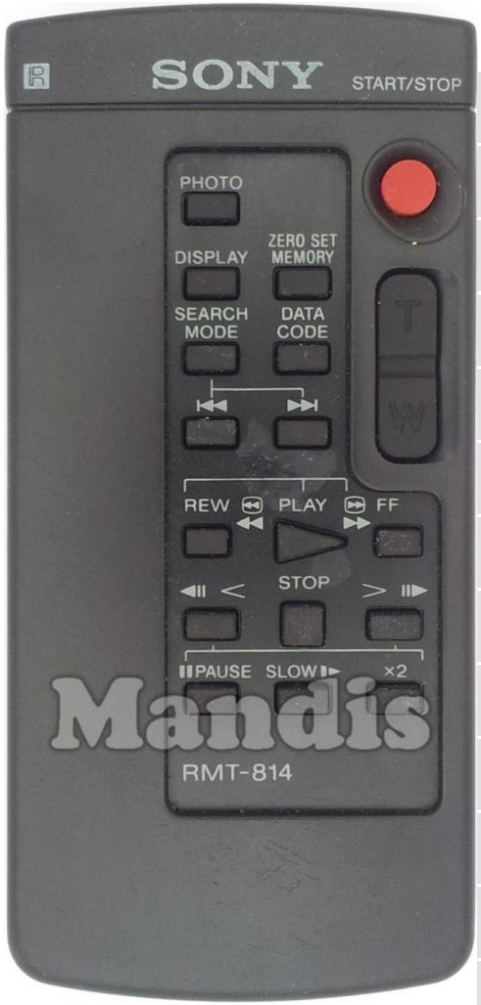

Original	Replacement	Original	Replacement
Start/Stop	Power	Slow I>	Format
Photo	Smart	x2	3D
Display	Info		
Zero	Menu		
Data Code	Media		
T	Ch +		
W	Ch -		
Search Mode	TV/R		
I<<	I<<		
>>I	>>I		
<<	<<		
Play	Play		
>>	>>		
<II <	Left		
Stop	Stop		
> II>	Right		
Pause	Pause		

https://all-remote-controls.co.uk/en/Sony/1063841-5932-replacement-remote-control-for-Sony-RMT-814-147514161.html