Mandis shop

Thomson SB100BT-SB200BT

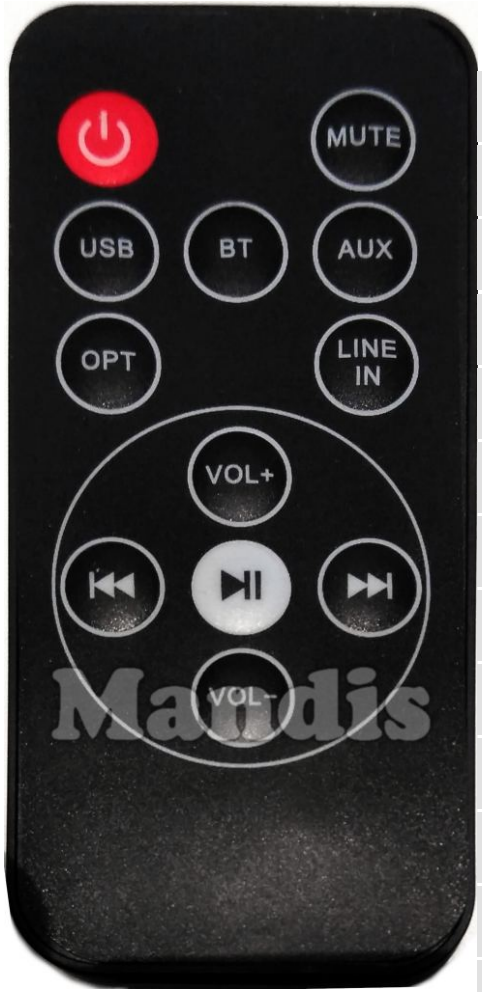

Original		Replacement	
	Power		Power
MUTE	Mute	MUTE	Mute
USB	USB	1	1
BT	BT	2	2
AUX	AUX	3	3
OPT	OPT	5	5
LINE IN	Line In	6	6
VOL+	Vol+	+ VOL	Vol +
VOL+	Vol+		Up
VOL-	Vol-	VOL −	Vol -
VOL-	Vol-		Down
	>>I		>>I
	>>I		Right
	I<<		I<<
	I<<		Left
	Play / Pause	OK	Ok
	Play / Pause	PLAY MODE	Play

Original		Replacement	
	Play / Pause		Pause

https://all-remote-controls.co.uk/en/Thomson/1063766-92535-replacement-remote-control-for-Thomson-SB100BT.html