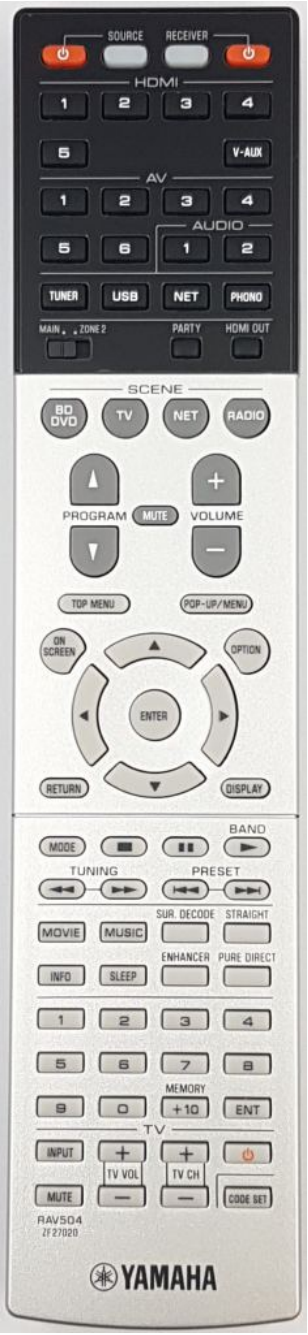

Original		Replacement		Original		Replacement	
	Power Source	SHIFT +	Shift + Power	USB	USB	SHIFT + 8	Shift + 8
	Power Receiver		Power	NET	Net	SHIFT + 9	Shift + 9
1	HDMI 1	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /	PHONO	Phono	SHIFT + 3	Shift + 3
2	HDMI 2	SHIFT + APP REPEAT	Shift + Green / APP /	PARTY	Party	GOTO TEXT	Text / Goto
3	HDMI 3	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /	HDMI OUT	HDMI Out	SHIFT + 0	Shift + 0
4	HDMI 4	SHIFT + Prime Video RANDOM	Shift + Blue / Prime	BD DVD	BD/DVD Scene	SHIFT + ▲	Shift + Up
5	HDMI 5	SHIFT + FAV MARKER	Shift + Fav / Marker / PC	TV	TV Scene	SHIFT + ◀	Shift + Left
V-AUX	V-AUX	SHIFT + 7	Shift + 7	NET	NET Scene	SHIFT + ▼	Shift + Down
1	AV 1	NETFLIX SEARCH	Red / Netflix / Search	RADIO	Radio Scene	SHIFT + ▶	Shift + Right
2	AV 2	APP REPEAT	Green / APP / Repeat	PROGRAM	Program Up	CH PAGE +	CH+ / Page+
3	AV 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat	VOLUME	Volume+	VOL +	Vol +
4	AV 4	Prime Video RANDOM	Blue / Prime Video / Random	PROGRAM	Program Down	CH PAGE −	CH- / Page-
5	AV 5	FAV MARKER	Fav / Marker / PC	MUTE	Mute	DIMMER MUTE	Mute / Dimmer
6	AV 6	GUIDE EPG	Guide / EPG / -/--	VOLUME	Volume-	VOL −	Vol -
1	Audio 1	SHIFT + TV 1	Shift + 1	TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
2	Audio 2	SHIFT + DVD 2	Shift + 2	POP-UP/MENU	Pop-Up/Menu	HOME MENU	Menu / Home
TUNER	Tuner	SHIFT + TUNER 6	Shift + 6	ON SCREEN	On Screen	LIST SMART	Smart / List

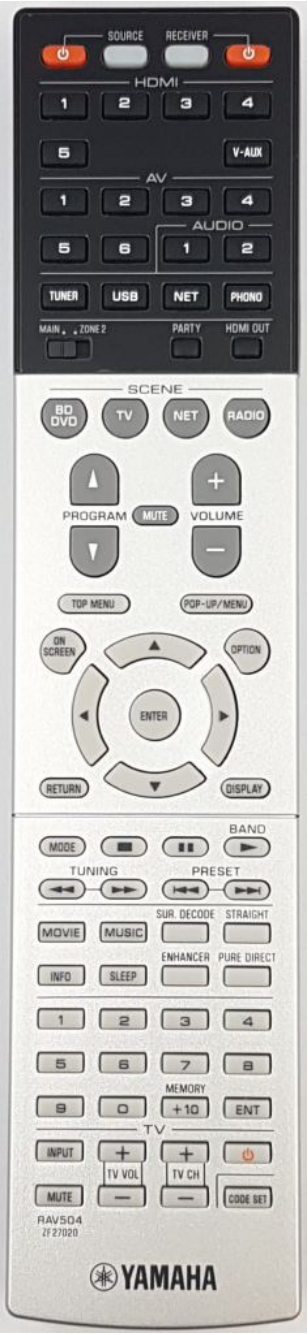

Original		Replacement	
	Up		Up
OPTION	Option	OPT-TOOLS SETUP	Setup / OPT /
	Left		Left
ENTER	Enter	OK	OK
	Right		Right
RETURN	Return	RETURN BACK	Back / Return
	Down		Down
DISPLAY	Display	MEDIA DISPLAY	Display / Media
MODE	Mode	REC MODE	Rec / Rec Mode
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
TUNI	<< Tuning	TUNE-	<< / Tune-
NING	Tuning >>	TUNE+	>> / Tune+
PRE	I<< Preset	PRESET-	I<< / Preset-
ESET	Preset >>I	PRESET+	>>I / Preset+
MOVIE	Movie	TITLE SOUND	Sound / Title

Original		Replacement	
MUSIC	Music	LANG I/II AUDIO	Audio / Lang I/II
SUR. DECODE	Sur. Decode	SURROUND	Eject / Surround
STRAIGHT	Straight	EQ SUBTITLE	Subtitle / EQ
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
ENHANCER	Enhancer	FORMAT PICTURE	Picture / Format
PURE DIRECT	Pure Direct	SIZE ZOOM	Zoom / Size
1	1	TV 1	1
2	2	DVD 2	2
3	3	CD-STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0

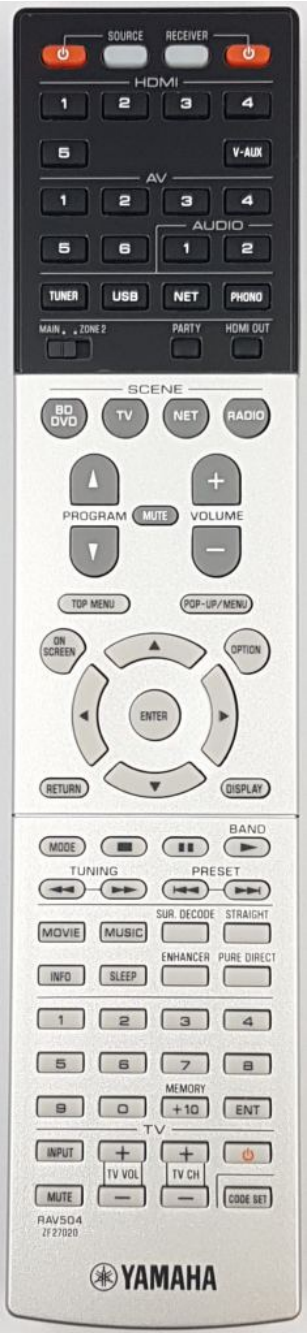

Original	Replacement	Original	Replacement
MEMORY +10 +10/ Memory	SHIFT + GUIDE EPG Shift + Guide / EPG / -/--		
ENT ENT	CLEAR EXIT CANCEL Exit / Cancel / Clear		

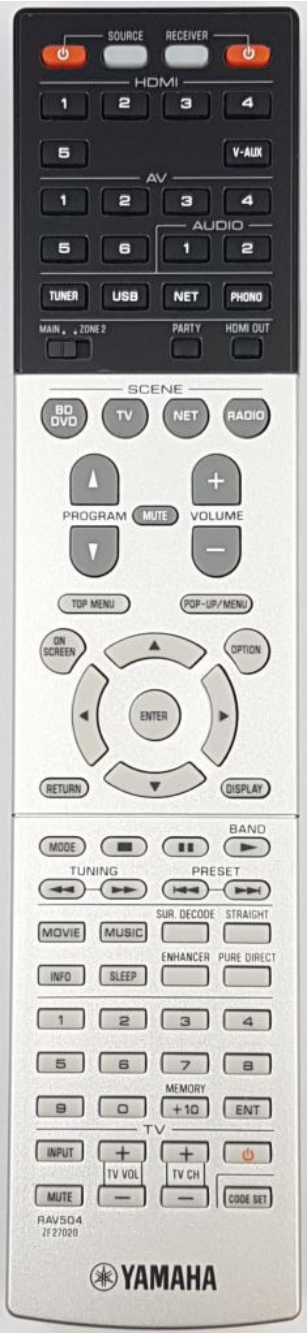

Original		Replacement		Original		Replacement	
	Power Source	SHIFT +	Shift + Power	USB	USB	SHIFT + 8	Shift + 8
	Power Receiver		Power	NET	Net	SHIFT + 9	Shift + 9
1	HDMI 1	SHIFT + NETFLIX SEARCH	Shift + Red / Netflix /	PHONO	Phono	SHIFT + 3	Shift + 3
2	HDMI 2	SHIFT + APP REPEAT	Shift + Green / APP /	PARTY	Party	GOTO TEXT	Text / Goto
3	HDMI 3	SHIFT + YouTube REPEAT A-B	Shift + Yellow / YouTube /	HDMI OUT	HDMI Out	SHIFT + 0	Shift + 0
4	HDMI 4	SHIFT + Prime Video RANDOM	Shift + Blue / Prime	BD DVD	BD/DVD Scene	SHIFT +	Shift + Up
5	HDMI 5	SHIFT + FAV MARKER	Shift + Fav / Marker / PC	TV	TV Scene	SHIFT +	Shift + Left
V-AUX	V-AUX	SHIFT + 7	Shift + 7	NET	NET Scene	SHIFT +	Shift + Down
1	AV 1	NETFLIX SEARCH	Red / Netflix / Search	RADIO	Radio Scene	SHIFT +	Shift + Right
2	AV 2	APP REPEAT	Green / APP / Repeat	VOLUME +	Volume+	VOL +	Vol +
3	AV 3	YouTube REPEAT A-B	Yellow / YouTube / Repeat	MUTE	Mute	DIMMER MUTE	Mute / Dimmer
4	AV 4	Prime Video RANDOM	Blue / Prime Video / Random	VOLUME −	Volume-	VOL −	Vol -
5	AV 5	FAV MARKER	Fav / Marker / PC	TOP MENU	Top Menu	TOP MENU D.MENU	D.Menu / Top
6	AV 6	GUIDE EPG	Guide / EPG / -/--	POP-UP/MENU	Pop-Up/Menu	HOME MENU	Menu / Home
1	Audio 1	SHIFT + TV 1	Shift + 1	ON SCREEN	On Screen	LIST SMART	Smart / List
2	Audio 2	SHIFT + DVD 2	Shift + 2		Up		Up
TUNER	Tuner	SHIFT + TUNER 6	Shift + 6	OPTION	Option	OPT-TOOLS SETUP	Setup / OPT / Tools

Original		Replacement	
	Left		Left
ENTER	Enter	OK	OK
	Right		Right
RETURN	Return	RETURN BACK	Back / Return
	Down		Down
DISPLAY	Display	MEDIA DISPLAY	Display / Media
MODE	Mode	REC MODE	Rec / Rec Mode
	Stop	HOLD	Stop / Hold
	Pause	STEP-FREEZE	Pause / Step / Freeze
BAND	Play/Band	SLOW	Play / Slow
TUNI	<< Tuning	TUNE-	<< / Tune-
NING	Tuning >>	TUNE+	>> / Tune+
PRE	I<< Preset	PRESET-	I<< / Preset-
ESET	Preset >>I	PRESET+	>>I / Preset+
INFO	Info	ANGLE INFO	Info / Angle
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer
1	1	TV 1	1

Original		Replacement	
2	2	DVD 2	2
3	3	CD-STB 3	3
4	4	VIDEO 4	4
5	5	TAPE 5	5
6	6	TUNER 6	6
7	7	AUX-HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
0	0	HDMI-SAT 0	0
MEMORY +10	+10/Memory	SHIFT + -/-- GUIDE EPG	Shift + Guide / EPG / -/--
ENT	ENT	CLEAR EXIT CANCEL	Exit / Cancel / Clear